Thinking of you

Electrolux

PRECISION
BRUSHROLLCLEAN
OWNERS GUIDE

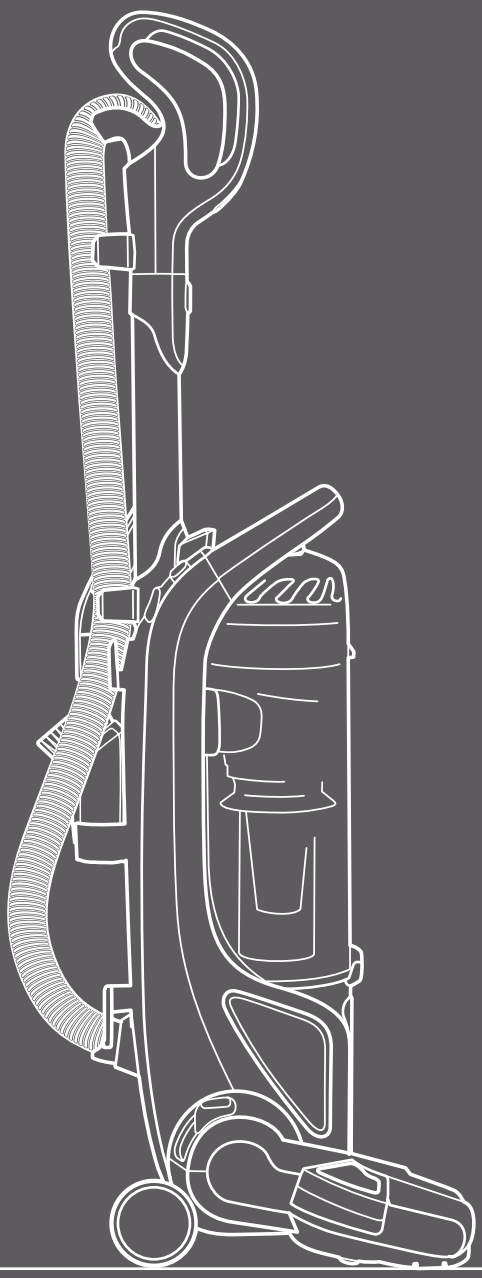

CONTENTS

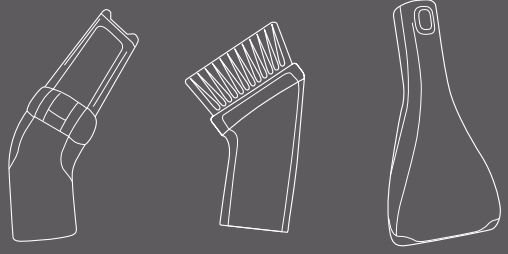

*

Selected Model Only

Congratulations on your purchase of an Electrolux vacuum cleaner – designed to help you care for your home environment. This Owner's Guide will help you make the best possible use of your new vacuum cleaner. Please begin by reading it, and keep it for future reference.

IMPORTANT: If you have questions about using your vacuum cleaner, call Electrolux's Customer Service Helpline. Your vacuum cleaner was thoroughly inspected and tested before it left the factory. If you note any shipping damage, call the Helpline immediately.

Register your purchase
Please register your purchase at www.electrolux.com.au (AUS) or www.electrolux.co.nz (NZ).

For Electrolux service
Authorized Electrolux Service Centers provide maintenance, parts and repair. To find the Service Center nearest you, go to www.electrolux.com.au or call 1300 366 366 (AUS) / www.electrolux.co.nz or call 0508 730 730 (NZ).

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING

To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- Do not leave vacuum cleaner when plugged in. Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not place vacuum on furniture or stairs as the brush roll may cause damage.
- Use extra care when cleaning on stairs. Do not place vacuum at top of stairs.
- Use extra care when cleaning area rugs as the brush roll may cause damage.
- Unplug before connecting turbo nozzle (if supplied) or other attachments. Place vacuum on floor with the handle in upright position while using attachments.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup or filter(s) in place.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your vacuum indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.
- Brush roll could suddenly restart. Unplug before servicing.
- Do not press Brushroll Clean™ button more than recommended by the manufacturer.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

⚠ NOTICE: Thermal Cut Off

This vacuum cleaner has a special thermostat that protects the vacuum in case of motor overheating.

If the vacuum suddenly shuts off proceed as follows:

1) Push the on/off switch off (I) and unplug the vacuum.

2) Check the vacuum for a possible source of overheating such as a full dust cup, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum.

3) After the 30 minute period, plug the vacuum back in and push the on/off switch on (I). If the vacuum still does not work, call the Electrolux customer service helpline.

Follow caution information whenever you see this symbol.

IN THIS PACKAGE

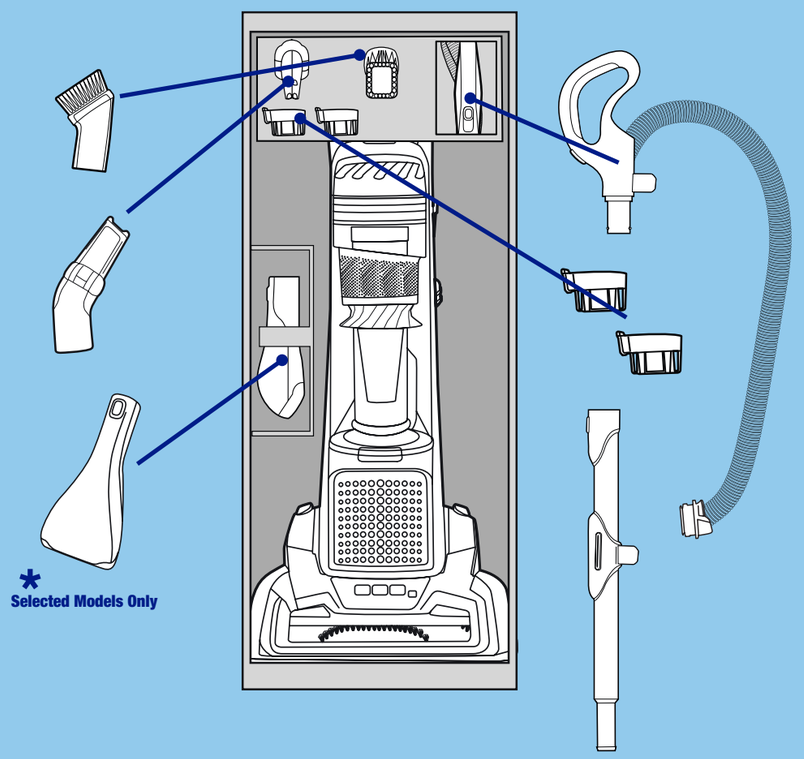

✱ Selected Models Only

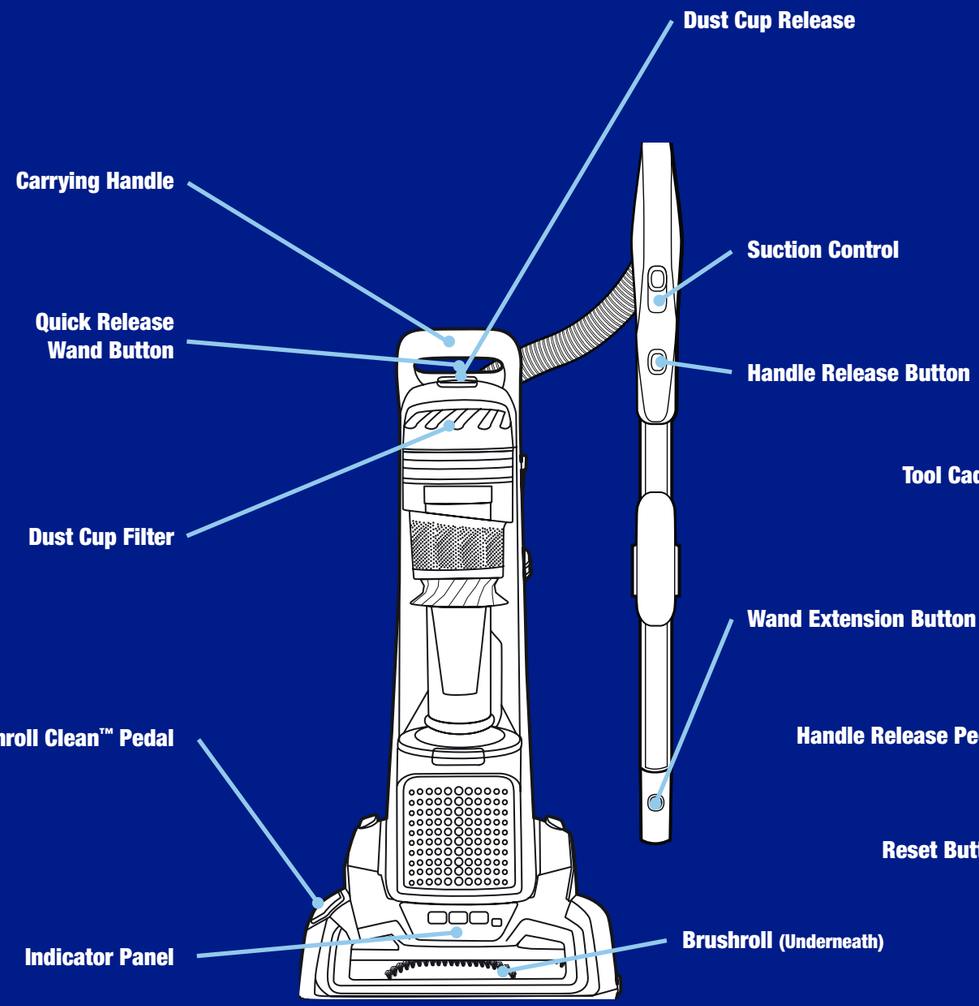

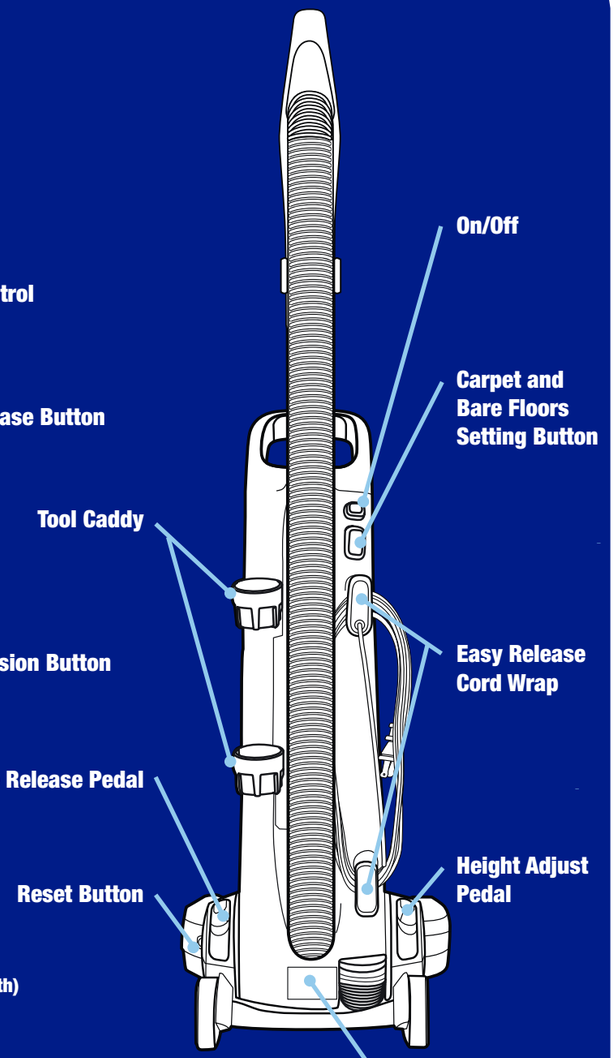

KEEP THIS INFORMATION

Write the model, type and serial number here:
Date of purchase (keep your receipt) _____
Model number and type _____
Serial number _____
Find these numbers on a label on the lower back side of the vacuum cleaner. Refer to these numbers when ordering parts and accessories or if service is needed.

HOW TO USE

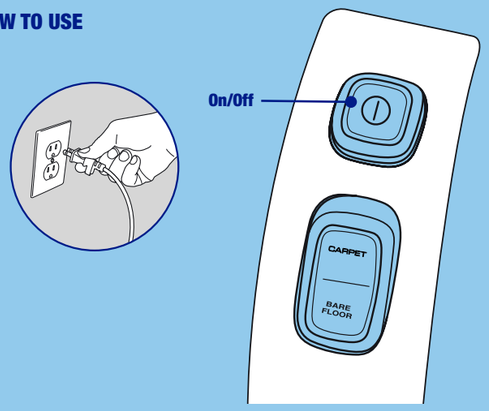

HANDLE RELEASE PEDAL

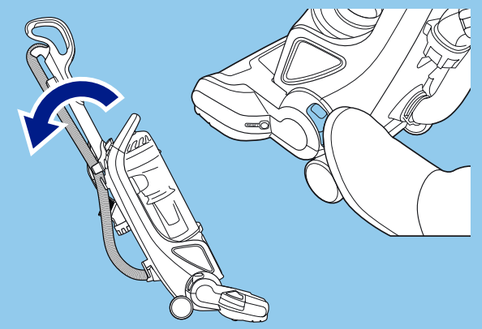

HEIGHT ADJUST PEDAL

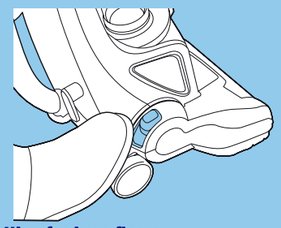

Low setting for bare floors.
Med/Hi setting for carpet.

ONE TOUCH QUICK RELEASE WAND BUTTON

DUST CUP RELEASE BUTTON

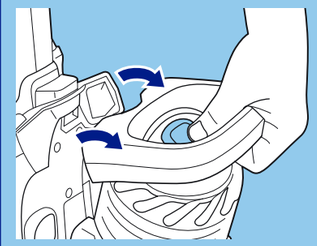

SUCTION CONTROL (wand use only)

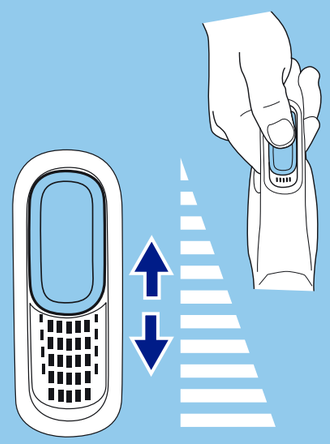

ASSEMBLY

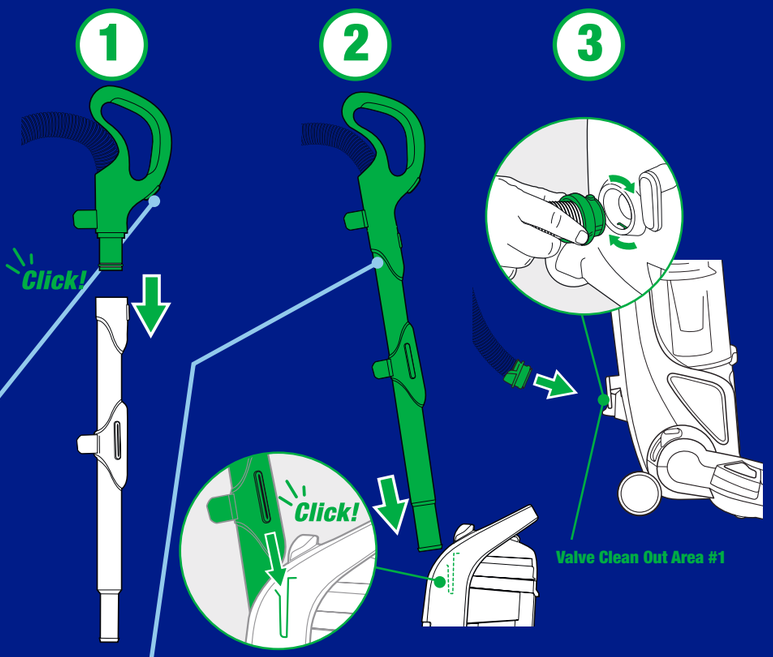

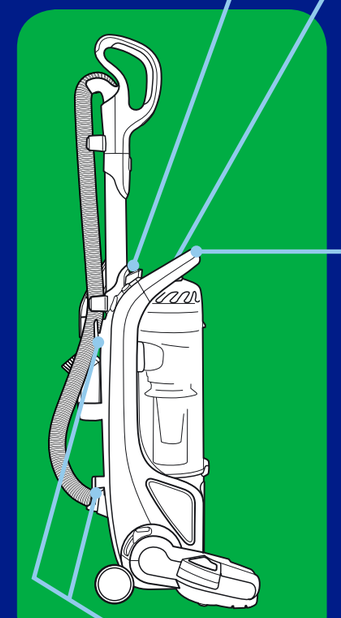

CARRY HANDLE

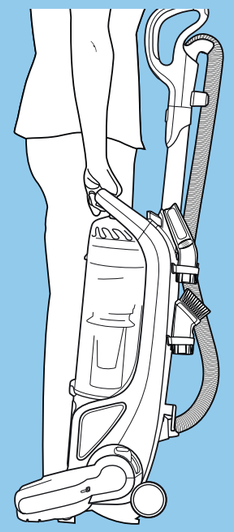

ONE TOUCH QUICK RELEASE WAND

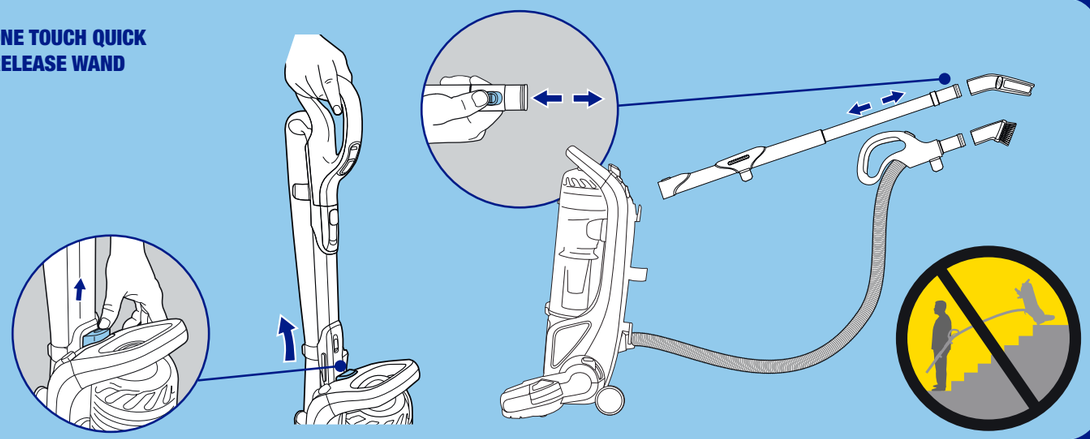

ACCESSORIES

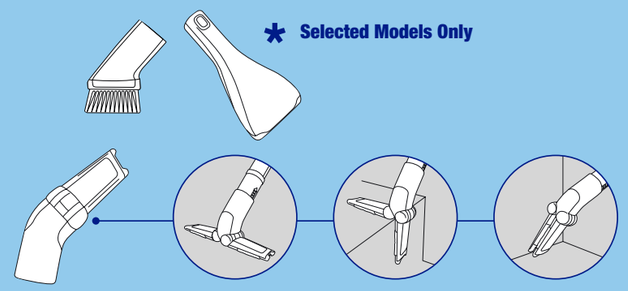

EASY RELEASE CORD WRAP/UNWRAP

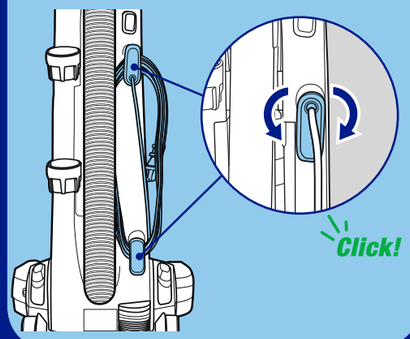

DUST CUP AND WASHABLE FILTER

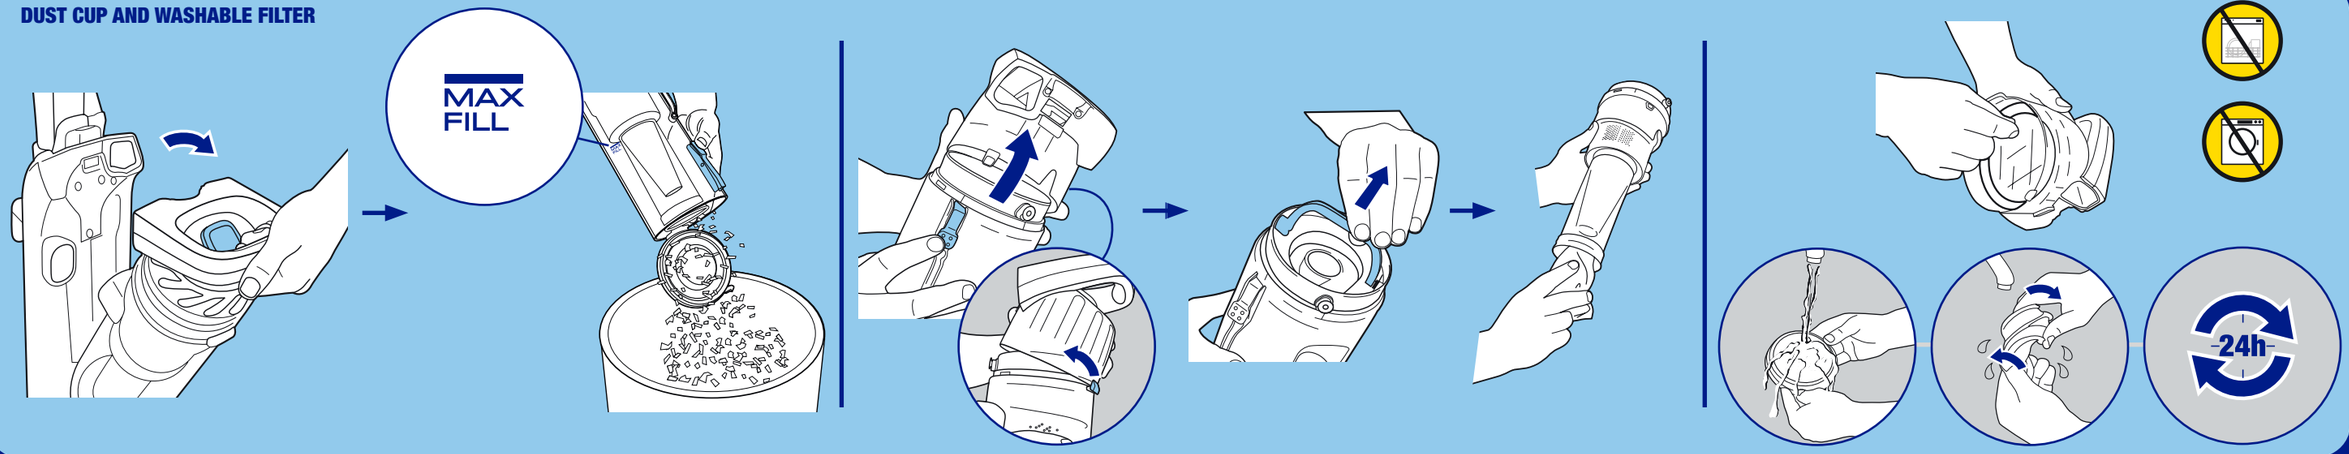

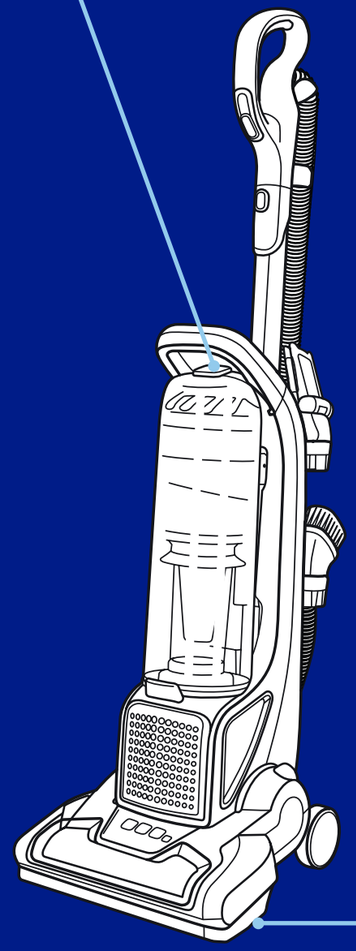

WASHABLE HEPA FILTER

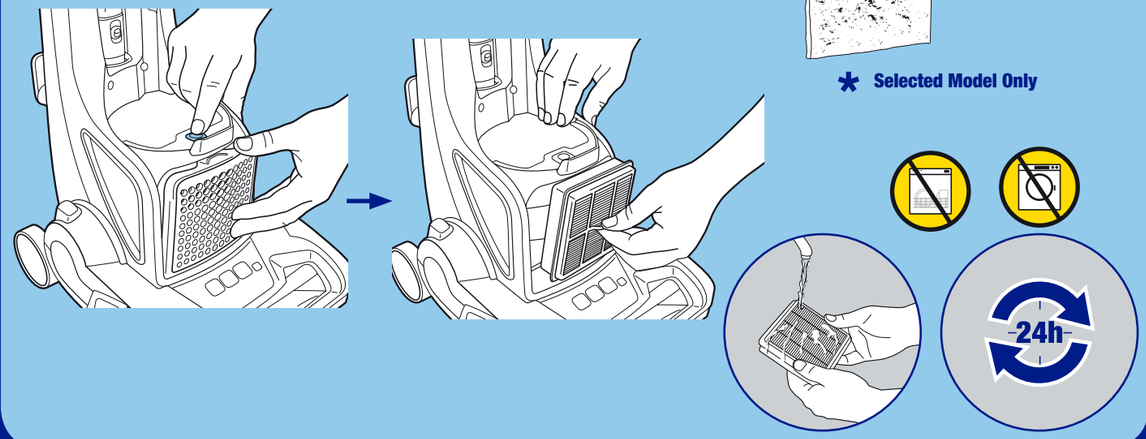

✱ Selected Model Only

CLEANING THE BRUSH ROLL USING Brushroll Clean Technology™

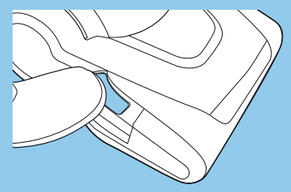

10 sec

For stubborn debris, repeat 1x

Note: To use, make sure the cleaner is on a bare floor. Do not use the Brushroll Clean feature on deep carpets or long haired rugs.
For obstructions larger than hair or thread, do not use Brushroll Clean, clean the brush roll manually (see directions below)

CLEANING THE BRUSH ROLL MANUALLY

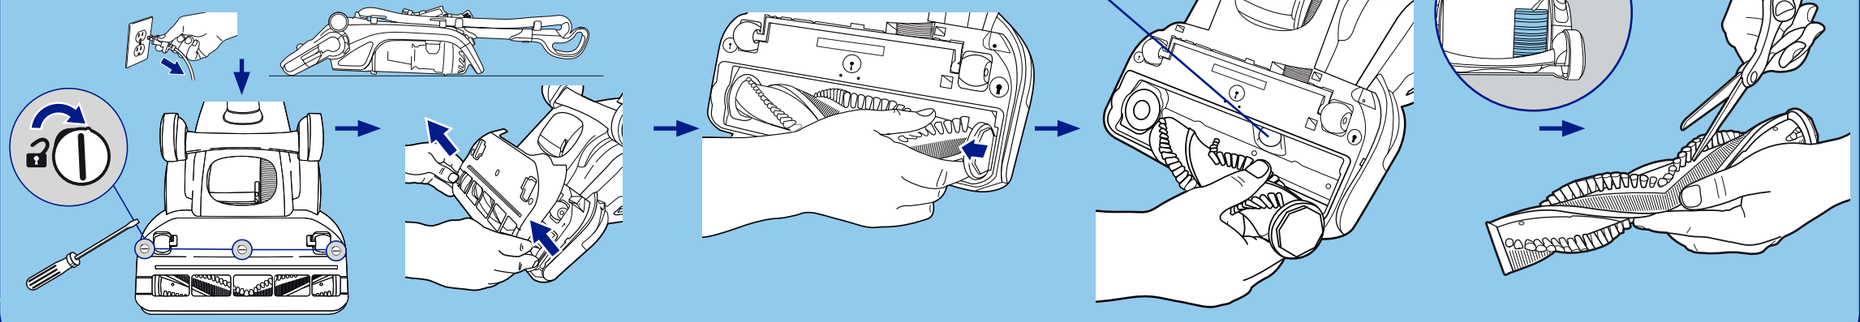

WARNING: Risk of personal injury. Brushroll may unexpectedly restart. Unplug before cleaning or servicing

TROUBLESHOOTING

For your safety, turn vacuum cleaner off and unplug power cord before attempting to resolve problems.

PROBLEM	POSSIBLE CAUSES	SOLUTION
Motor will not start or suddenly stops	Unit not connected to power source	• Push plug securely into outlet • Try another outlet or check circuit breaker • Check plug and cord for damage
	Switch not turned on	• Press power switch to 'carpet' or 'bare floor' setting
	Themal cut-off has operated	• Correct the cause of motor overheating. See thermal cut-off information
No suction. Vacuum cleaner does not pick up lint or dirt	Blockage in air path	• Remove any obstructions that restrict airflow through hose and valve clean out areas #1 & #2
	Dust cup full	• Empty dust cup
	Dust Cup Filter clogged	• Remove and clean filter. Fine dust can block the airflow through the filter and reduce suction even if dust cup does not look full
	Hepa Filter clogged	• Remove and clean filter
	Dust Cup Filter not in place	• Filter must be in filter frame for correct performance • Make sure filter frame is installed properly in filter cover for dust cup assembly to fit back into place
	Switch not on proper setting	• Use 'carpet' setting for carpetted floors • Use 'bare floor' setting for hard-surfaced floors and when using accessories
	* Turbo nozzle clogged (selected models only)	• Remove and clean debris from turbo nozzle
No suction on the handle	Wand not released	• Press Wand Release button
Dust cup will not lock into vacuum cleaner	Dust Cup Filter not in place	• Locate dust cup filter and insert into dust cup
Quick Release handle will not lock into vacuum cleaner	Telescopic wand is extended	• Place end of wand into opening at back of vacuum and align ribs into grooves
Red "check brush roll" indicator light is on	Object caught in brush roll	• Unplug vacuum, remove debris and threads from brush roll. Depress brush roll reset button, plug in unit, and continue. • Use 'bare floor' setting when vacuuming fringe of rugs • Check brush roll for threads and debris. Clean if needed
	Brush roll not positioned properly	• Make sure both ends of brush roll are free of debris and secured properly so roll can rotate freely
	Brush roll not operating properly **Note: "Check brush roll" indicator light turns on when brush roll is not turning. Brush roll motor will shut off to prevent damage to motor.**	
Brushroll Clean™ will not work when pedal is engaged	If used for more than 20 seconds consecutively or concurrently within a short period, ShearClean will need approximately 1 minute to reset	• Do not use Brush Roll Clean™ for one minute. Feature should then return to normal function
Brushroll will not turn	Using brushroll clean pedal on high pile rug/carpet	• Move unit to bare floor, push reset button. Operate normally

Note: Any servicing of the vacuum other than described in this manual shall only be performed by an authorized service representative.

WARRANTY

FOR SALES IN AUSTRALIA & NEW ZEALAND
APPLIANCE: FLOOR CARE

This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.

1. In this warranty
   (a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL.
   (b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010.
   (c) 'Appliance' means any Electrolux product purchased by you accompanied by this document, but excludes batteries or battery packs.
   (d) 'ASC" means Electrolux Authorised Service Centre'.
   (e) 'Electrolux' means Electrolux Pty Ltd of 57– 63 Fairchild Street, Heatherton, VIC 3202 ABN 21 000 015 136 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand.
   (f) `major failure' as referred to in Clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Electrolux, at its discretion, to repair an Appliance during the Warranty Period.
   (g) 'Warranty Period' means:
      (i) where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects in Australia and New Zealand for 24 months following the date of original purchase of the Appliance;
      (ii) where the Appliance and accessories (including nozzles, brushes or other cleaning attachments) are used for commercial purposes (including being used to directly assist a business or where the Appliance is used in a multi-family communal or share type environment), the Appliance will then be warranted against manufacturing defects in Australia for 3 months and in New Zealand for 3 months, following the date of original purchase of the Appliance.
      (iii) "Batteries or battery packs ("Batteries") supplied with your Appliance are a consumable item. When used under normal conditions, Electrolux warrants Batteries supplied with your purchase. During the first 3 months from the date of first purchase Electrolux will replace any defective Batteries. Reduction in Battery runtime due to Battery age or use is considered normal and is not a defect and is not covered by this warranty. New Batteries can be purchased for your Appliance and, for safety reasons, it is important to ask your Appliance or battery supplier to complete the Battery change over for you.
   (h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. During the Warranty Period Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to vacuum bags, filters or similar perishable parts.
4. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
5. You will bear the cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. If you reside outside of the service area, you will bear the cost of:
   (a) travel of an authorised representative;
   (b) transportation and delivery of the Appliance to and from Electrolux or its ASC, In all instances, unless the Appliance is transported by Electrolux or an Electrolux authorised representative, the Appliance is transported at the owner's cost and risk while in transit to and from Electrolux or its ASC.
6. Proof of purchase is required before you can make a claim under this warranty.
7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
   (a) the Appliance is damaged by:
      (i) accident
      (ii) misuse or abuse, including failure to properly maintain or service
      (iii) normal wear and tear
      (iv) power surges, electrical storm damage or incorrect power supply
      (v) incomplete or improper installation
      (vi) incorrect, improper or inappropriate operation
      (vii) insect or vermin infestation
      (viii) failure to comply with any additional instructions supplied with the Appliance;
      (ix) suction of any liquids or building materials (including plaster or concrete dust)
   (b) the Appliance is modified without authority from Electrolux in writing;
   (c) the Appliance's serial number or warranty seal has been removed or defaced;
   (d) the Appliance was serviced or repaired by anyone other than Electrolux, an authorised repairer or ASC.
8. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable where the Appliance was purchased. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.
9. To the extent permitted by law, Electrolux excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
10. For Appliances and services provided by Electrolux in Australia, the Appliances come with a guarantee by Electrolux that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.
11. At all times during the Warranty Period, Electrolux shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
12. For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act.
13. To enquire about claiming under this warranty, please follow these steps:
   (a) carefully check the operating instructions, user manual and the terms of this warranty;
   (b) have the model and serial number of the Appliance available;
   (c) have the proof of purchase (eg an invoice) available;
   (d) telephone the numbers shown below.
14. You accept that if you make a warranty claim, Electrolux and its ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Electrolux

Share more of our thinking at
www.electrolux.com

Electrolux Home Products Pty Ltd (Australia)

customer care
telephone: 1300 365 305
email: customerservice@electrolux.com.au
web: www.electrolux.com

Electrolux Small Appliances (New Zealand)

customer care
telephone: 0508 730 730 (free call NZ only)
web: www.electrolux.com

product information: The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous product development, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes the products that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that, to the greatest extent permissible under the Australian Consumer Law, Electrolux Small Appliances Pty Ltd will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours of products illustrated are as close as printing limitations allow.